




1. Run NovaLCT-Pluto, move the cursor over the *Advanced Login (A)* and click the button.

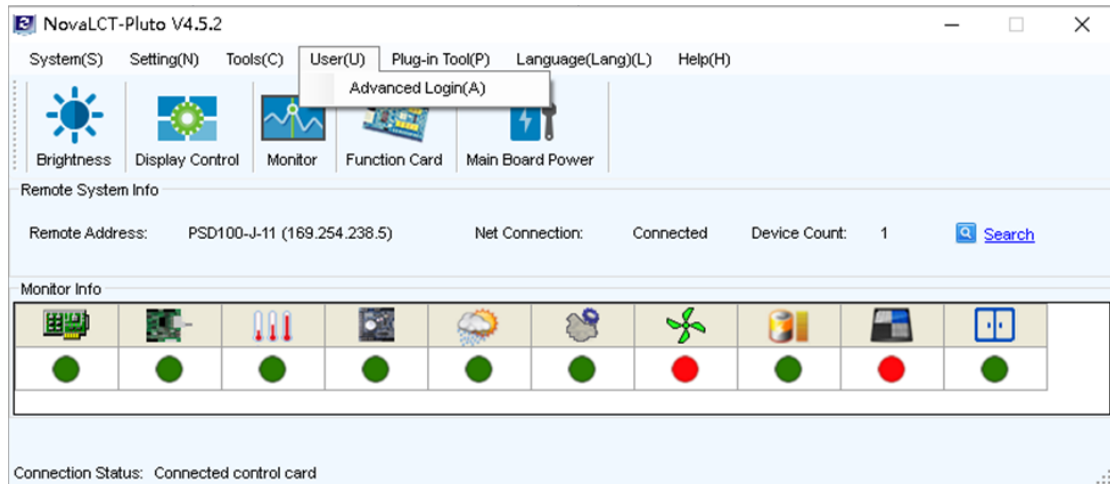


2. Login with the password "admin".

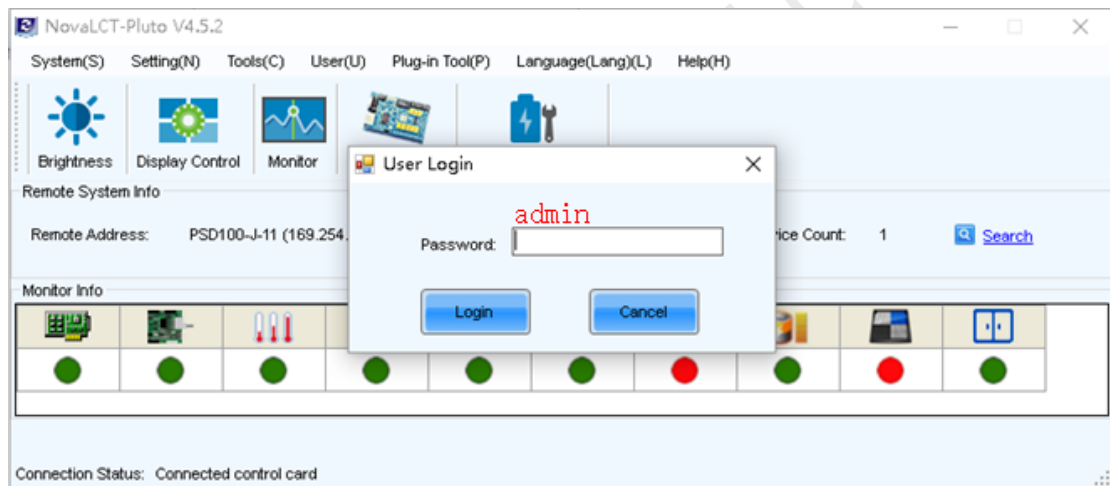

3. Click on the *Function Card* button.

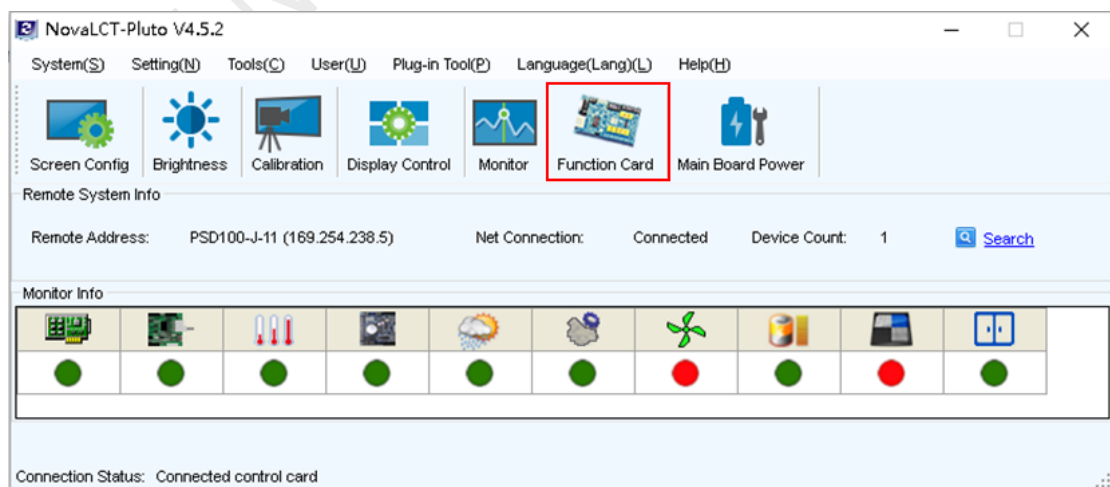

4. Click on the *Refresh* and find the function card.

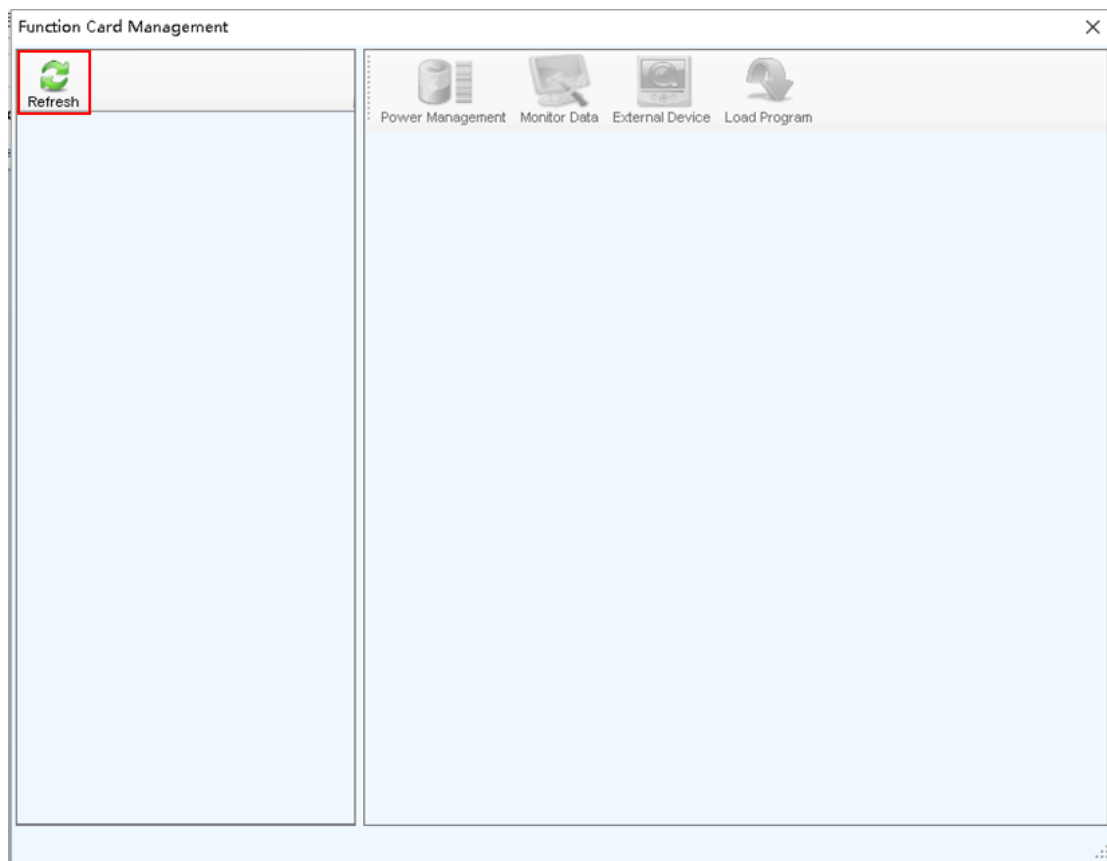

XI'AN NOVASTAR

5. Check and set the Function Card Time by clicking *Read* and *Set* button to ensure the Function Card Time is synchronized with your clock.

