 


1. After starting the controller, the main interface of the *Operation screen* is as follows:



2. Press the Knob twice to enter to Brightness adjustment.



3. Rotate the *Knob* to adjust the brightness level per your needs.





4. Press the *Knob* again to save the brightness settings.



5. Press the *ESC* to return to the main interface.

