




1. Run NovaLCT-Mars, move the cursor over the *Advanced User Login (A)* and click the button.

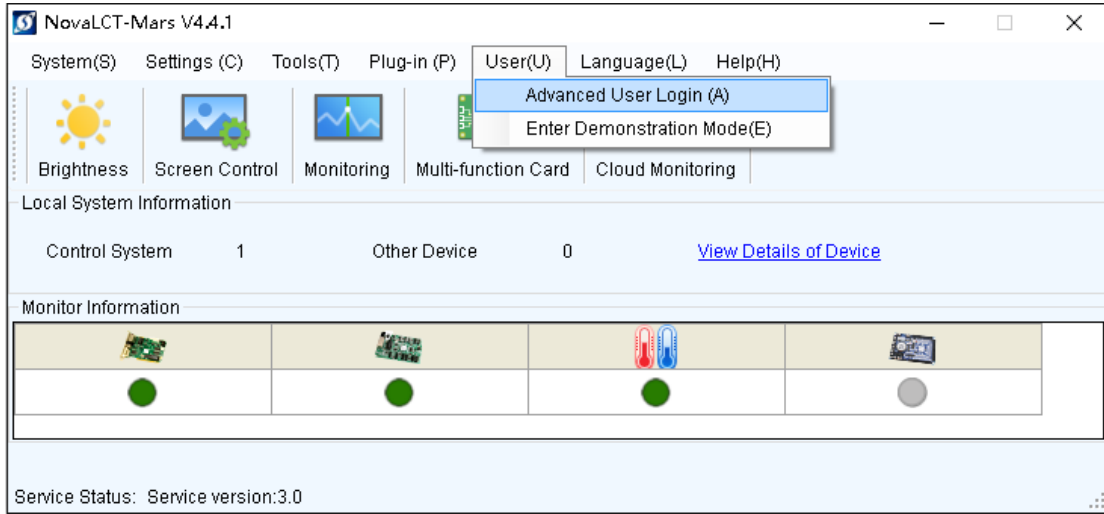


2. Login with the password "admin".

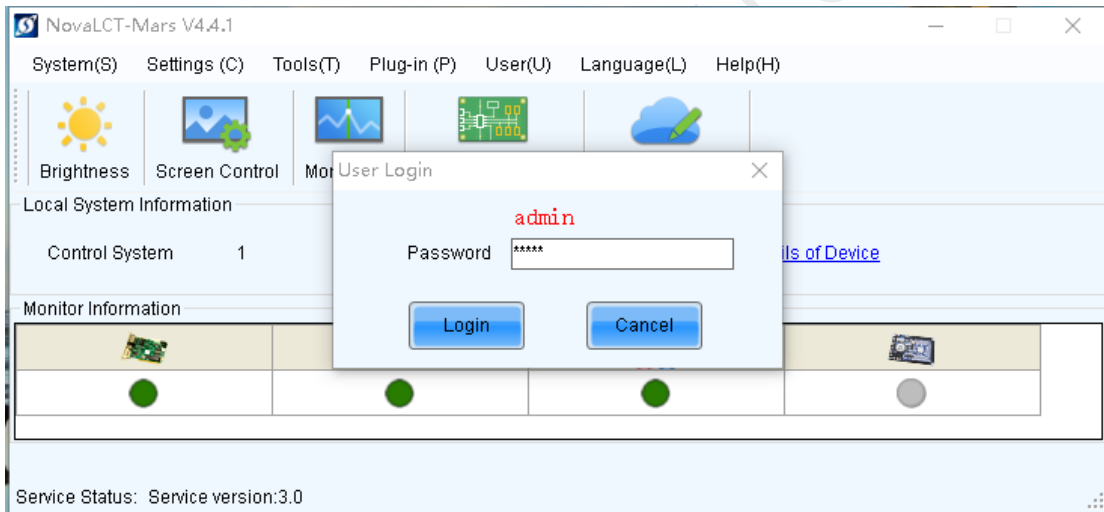

3. Type "admin" on the blank.

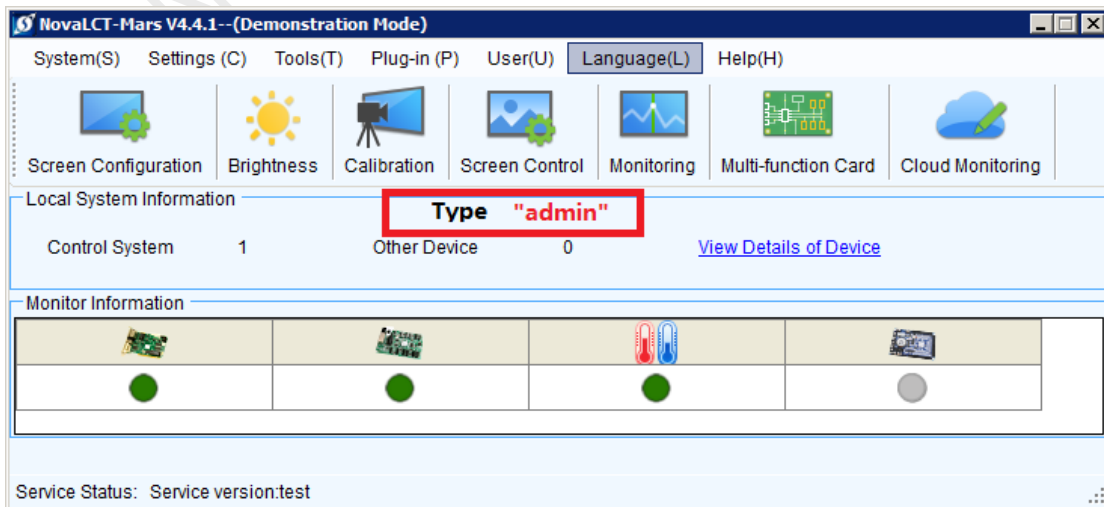

4. Choose right communication port→click *Sending Card FPGA*→click *Refresh* to finish firmware version check.

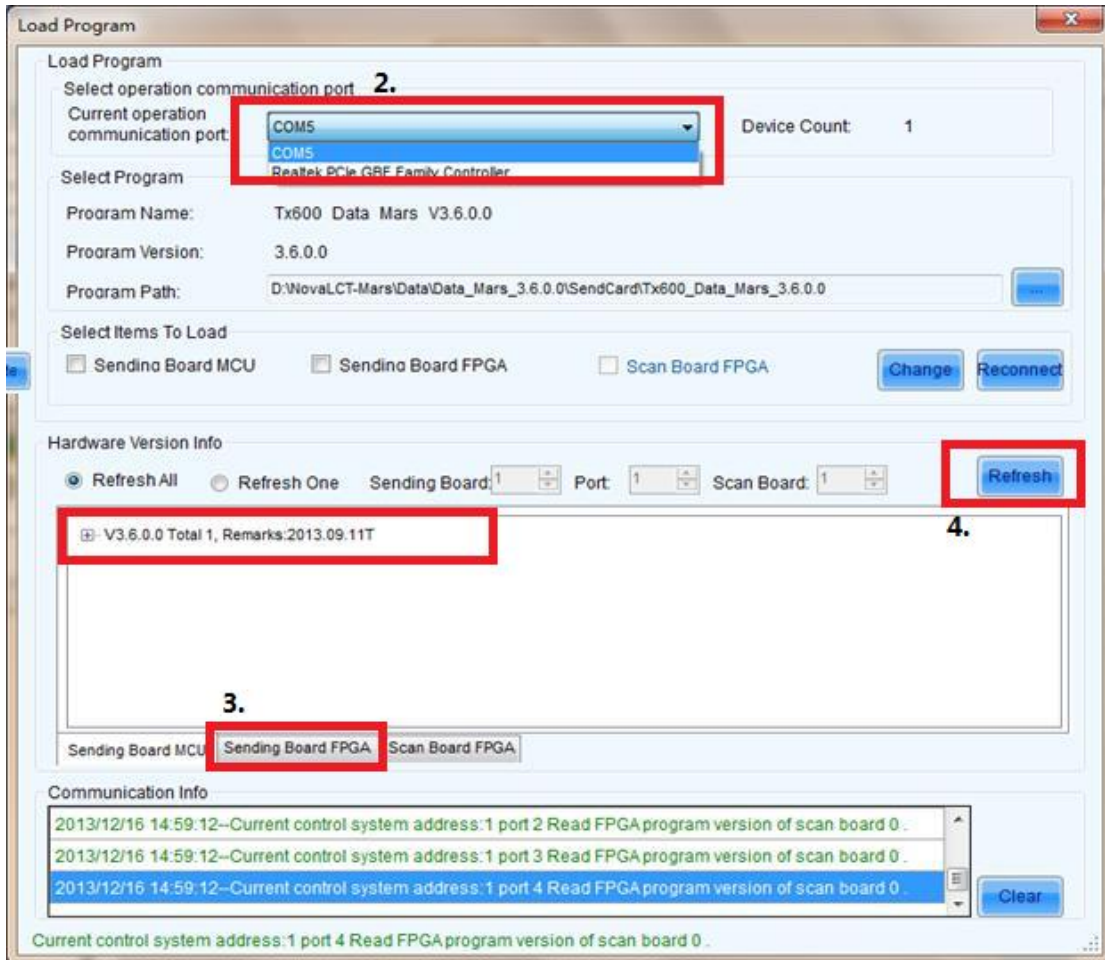

5. Choose *sending card FPGA* or *receiving card FPGA*.

- 6. Click *Program path* and choose right data.
- 7. Click *update* to finish update.

