


# J6

# **Seamless Switcher**

V3.0.0

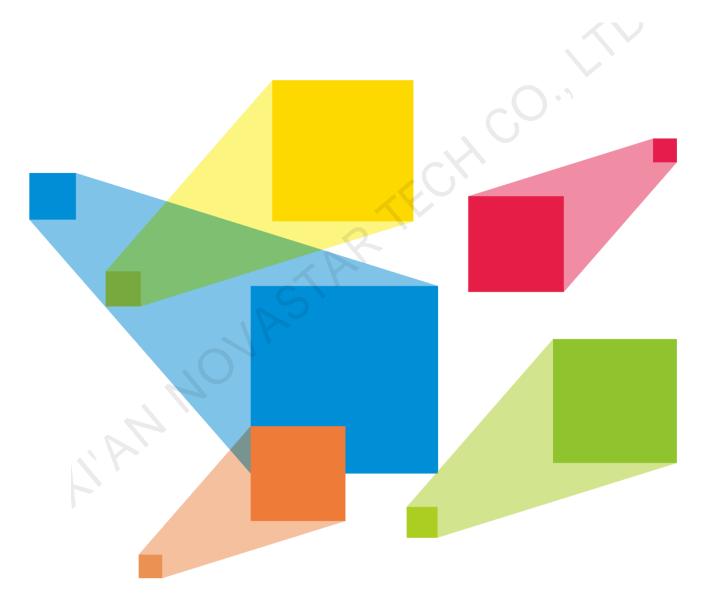

**Specifications** 

#### Introduction

The J6 is a NovaStar's high-performance seamless switcher that integrates video processing, screen mosaic, transition effects and multi-screen display capabilities. The J6 offers powerful video signal receiving and processing abilities and supports up to 8 inputs with the resolution up to 4Kx2K@30Hz and 6 layers. In addition, this product supports two system modes: Splicer and Switcher. When it is in Splicer mode, a maximum of 4 DVI output connectors can be used together for output, which can realize an up to 8KK loading capacity of each J6 unit. When it is in Switcher mode, a maximum of 2 DVI output connectors can be used together for output, which can realize an up to 4KK loading capacity of each J6 unit.

Based on a powerful FPGA platform, the J6 supports input and output EDID management and color adjustment, seamless transition on a variety of input sources, as well as fade and other transition effects, bringing you a more flexible and rich visual experience.

What's more, the J6 is equipped with NovaStar's smart control software V-Can and C1 event controller, allowing for a rich screen mosaic effect via V-Can, C1 or front panel operations. With excellent image quality, ultra-large loading capacity and flexible operation modes, the J6 can be widely used in conference reports, exhibition centers, stage control and other application scenarios.

### **Features**

Industry-standard input connectors

DVI connector: 1920x1080@60Hz input

HDMI 1.3 connector: 1920x1080@60Hz input

3G-SDI connector: 1920x1080@60Hz input

DP 1.1 connector: 4Kx2K@30Hz input

HDMI 1.4 connector: 4Kx2K@30Hz input

4 groups (2 connectors in each group) of DVI output connectors of a single J6 unit for mosaic output

Each group includes a main connector and a backup connector. A maximum of 4 connectors can be used for mosaic output. The mosaic layout can be 4x1, 1x4 or 2x2. The maximum loading capacity can reach 9,200,000 pixels and the maximum mosaic width can be up to 15360 pixels.

Dual system modes

Supports both Splicer and Switcher modes, which can meet different application requirements.

Multiple layer display

Supports up to 6x 4Kx2K layers that can be positioned freely and cross connector output.

Supports layer border settings.

- HDMI connector dedicated for output monitoring
  - Supports monitoring of a single input source, PVW or PGM.
  - Supports mixed monitoring of all input sources, PVW and PGM.
  - Supports displaying of input resolution and refresh rate.
- Display control function

Makes the screen fade to black or freeze the screen by simply clicking one button.

EDID management

Supports input resolution management on DVI, HDMI and DP connectors.

Transition effects

In Splicer mode, the device supports the setting of transition effect for source and preset switching.

In Switcher mode, the device supports the setting of Take effect and effect duration.

**BKG** capturing

Supports the capturing of input source and PGM, and the captured image can be used as

BKG image and pure color BKG

Supports both image BKG and pure color BKG. Up to 6 BKG images are supported.

- Adjustable input color, layer color and output color
- Preset management

Up to 10 presets are supported and the preset can be loaded simply by clicking one button.

Layer layout management

The device is built-in with 7 layer layouts. You can load one of the layer layouts to quickly lay out the layers.

Multiple operation modes

The device can be controlled via its front panel, the smart control software V-Can or C1 event controller.

Multiple J6 units controlled by one C1 unit

You can perform operations, such as FTB, freeze or Take operation, to multiple J6 units on the C1.


AUX

In Switcher mode, the device supports the AUX function.

 Intuitive LCD screen and clear button indicators on front panel, simplifying system control operations

### **Appearance**


### **Front Panel**

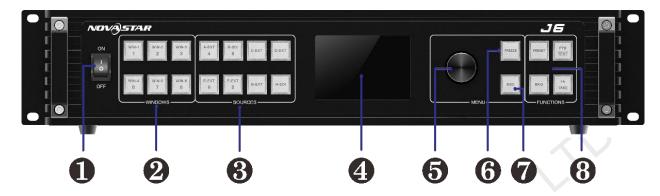


No.	Button	Description		
0	ON/OFF button	<ul> <li>Press ON to power on the device.</li> <li>Press OFF to power off the device.</li> </ul>		
2	Layer buttons	Open or close a layer, and show the layer status. Status LEDs:		
		<ul> <li>On: The layer is open, and the input source is accessed normally.</li> <li>Dim: The layer is open, but the input source is abnormal.</li> </ul>		
		<ul> <li>Off: The layer is not opened.</li> <li>Flashing: The layer is being edited.</li> </ul>		
		On the home screen, hold down the layer button for 2s or longer to close the opened layer.		
3	Input source buttons	Switch the layer input source and show the input source status.  Status LEDs:		
HR		<ul> <li>On: The input source is accessed and in normal use.</li> <li>Dim: The input source is accessed but not in use.</li> </ul>		
		Off: The input source is not accessed or the source signal is abnormal.		
4	LCD screen	Display the device menus, submenus and messages.		
5	Knob	<ul> <li>On the home screen, press the knob to enter the operation menu screen.</li> <li>On the operation menu screen, rotate the knob to select a menu item, and press the knob to confirm the selection or enter the submenu.</li> </ul>		
		<ul> <li>When a menu item with parameters is selected, rotate the knob to adjust the parameters. Please note that after adjustment, you need to press the knob again to confirm the adjustment.</li> </ul>		
6	Freeze button	Freeze or unfreeze the output image. Status LEDs:		
		<ul><li>On: The freeze function is enabled.</li><li>Off: The freeze function is disabled.</li></ul>		
7	ESC button	Press the button to exit the current menu or cancel the operation.		

No.	Button	Description	
8	Function buttons	<ul> <li>PRESET: Enter the preset menu.</li> <li>BKG: Enable or disable the BKG function.</li> <li>FTB/TEST: Press the button to make the screen fade to black and press the button again to exit the FTB mode. Hold down the button for 2s or longer to enter the test pattern menu.</li> </ul>	
		FN/TAKE: The function of this button varies in different system modes (Splicer and Switcher).	
		<ul> <li>In Splicer mode, press the button to enter the menu of the function that has been customized for Fn button. Hold down the button to enter the FN settings menu.</li> </ul>	
		<ul> <li>In Switcher mode, press the button to send PVW to PGM.</li> </ul>	

### Rear Panel

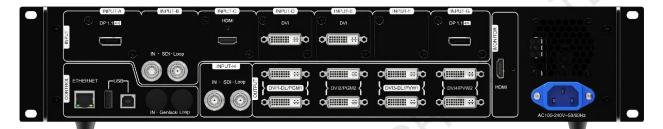

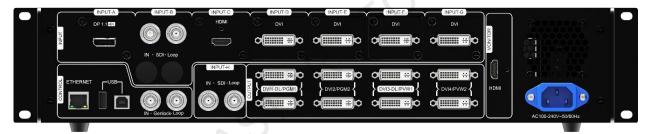

#### Notes:

- The J6 provides two default configurations that differ in Input-F and Input-G connectors on the rear panel.
- DP 1.1 and HDMI 1.4 connectors support at most 2 layers. Other connectors support at most 6 layers.

Input			
No.	Connector	Description	
INPUT-A	DP 1.1	Input resolution up to 3840×2160@30Hz and custom EDID supported HDCP 1.3 compliant Interchangeable with HDMI 1.4 input card (Input resolution up to 3840×2160@30Hz and custom EDID supported, HDCP 1.4 compliant) Does not support interlaced signal inputs.	
INPUT-B	3G-SDI	Input resolution up to 1920×1080@60Hz  Loop through function  Interlaced signal processing supported	
INPUT-C	HDMI 1.3	Input resolution up to 1920×1080@60Hz and custom EDID supported HDCP 1.4 compliant Interlaced signal processing supported Interchangeable with DVI or 3G-SDI input card	

www.novastar.tech PAGE 3

INPUT-D	DVI	Input resolution up to 1920×1080@60Hz, other VESA standard resolutions and custom EDID supported		
INPUT-E		HDCP 1.4 compliant		
		Interchangeable with HDMI 1.3 or 3G-SDI input card		
		Does not support interlaced signal inputs.		
INPUT-F	-	The J6 has two default versions.		
INPUT-G DP 1.1 / DVI		<ul> <li>Version I: INPUT-G is DP 1.1 input card that supports up to 3840×2160@30Hz video source input and custom EDID. When it is changed to HDMI 1.4 input card, the INPUT-F is unavailable.</li> </ul>		
		<ul> <li>Version II: INPUT-F and INPUT-G are DVI input cards that support up to 1920×1080@60Hz and other VESA-standard compliant video source inputs and custom EDID. The two connectors both can be changed to HDMI 1.3 or 3G-SDI input card.</li> </ul>		
INPUT-H 3G-SDI		Input resolution up to 1920×1080@60Hz		
		Loop through function		
		Interlaced signal processing supported		
Output				
No.	Connector	Description		
DVI	0	4		
DVI	8	4 groups (2 connectors in each group) of DVI output connectors can be used for mosaic output.		
DVI	8			
DVI	8	mosaic output.		
DVI	8	mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4		
MONITOR	1	mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4 are unavailable.		
		mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4 are unavailable.  In Splicer mode, DVI 3 can be used for AUX.  An HDMI connector dedicated for monitoring all input sources, a single input		
MONITOR		mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4 are unavailable.  In Splicer mode, DVI 3 can be used for AUX.  An HDMI connector dedicated for monitoring all input sources, a single input		
MONITOR  Control	1	mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4 are unavailable.  In Splicer mode, DVI 3 can be used for AUX.  An HDMI connector dedicated for monitoring all input sources, a single input source, PVW and PGM.		
MONITOR  Control  No.	1 Connector	mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4 are unavailable.  In Splicer mode, DVI 3 can be used for AUX.  An HDMI connector dedicated for monitoring all input sources, a single input source, PVW and PGM.  Description		
MONITOR  Control  No.  ETHERNET	1 Connector	mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4 are unavailable.  In Splicer mode, DVI 3 can be used for AUX.  An HDMI connector dedicated for monitoring all input sources, a single input source, PVW and PGM.  Description  Communicate with the control PC or connect to the network.		
MONITOR  Control No. ETHERNET USB (Type-B)	Connector  1  1	mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4 are unavailable.  In Splicer mode, DVI 3 can be used for AUX.  An HDMI connector dedicated for monitoring all input sources, a single input source, PVW and PGM.  Description  Communicate with the control PC or connect to the network.  Connect to the control PC for device control.		
MONITOR  Control  No.  ETHERNET  USB (Type-B)  USB (Type-A)	Connector  1  1	mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4 are unavailable.  In Splicer mode, DVI 3 can be used for AUX.  An HDMI connector dedicated for monitoring all input sources, a single input source, PVW and PGM.  Description  Communicate with the control PC or connect to the network.  Connect to the control PC for device control.		
MONITOR  Control No.  ETHERNET  USB (Type-B)  USB (Type-A)  Overall Specifica	1 Connector 1 1 1	mosaic output.  Each group includes a main connector and a backup connector.  The J6 supports dual-link DVI output mode. When the output is set to dual-link mode, DVI 1 and DVI 3 are used as output connectors, while DVI 2 and DVI 4 are unavailable.  In Splicer mode, DVI 3 can be used for AUX.  An HDMI connector dedicated for monitoring all input sources, a single input source, PVW and PGM.  Description  Communicate with the control PC or connect to the network.  Connect to the control PC for device control.  A reserved connector		

www.novastar.tech PAGE 4

## **Applications**

The J6 supports dual system modes: Splicer and Switcher. The connections for two modes are shown in Figure 1 and Figure 2.

Figure 1 Connections for Splicer mode



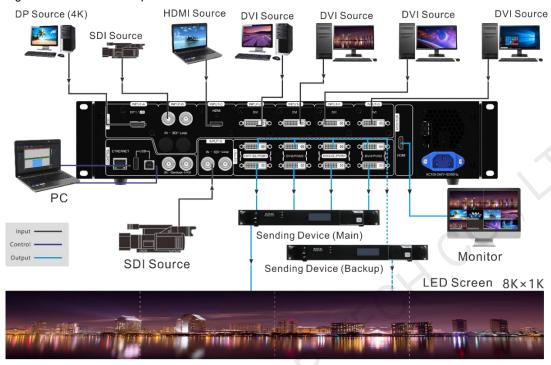


Figure 2 Connections for Switcher mode

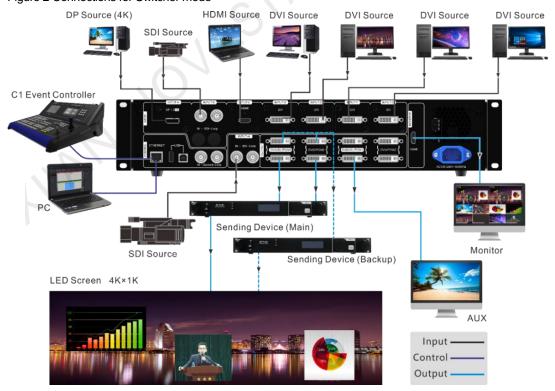

## **Dimensions**

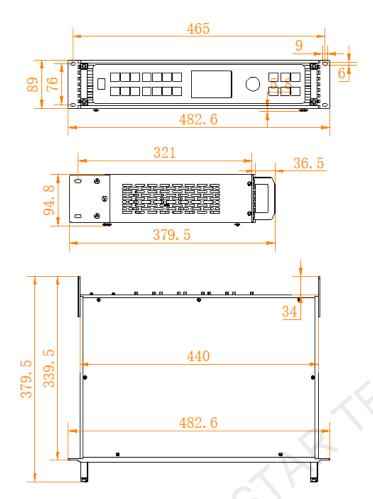

Unit: mm

# **Specifications**

www.novastar.tech

Connector performance	Common resolutions			
• DVI • HDMI 1.3	800×600@50/60/75/85H 1024×768@48/50/60/75 1152×864@75Hz 1280×720@48/50/60Hz 1280×768@48/50/60/75	/85Hz	1366×768@50/60Hz 1366×800@50/60Hz 1400×1050@48/50/60/75Hz 1440×900@60/75/85Hz 1600×900@48/50/60Hz	
	1280×800@50/60Hz 1280×960@50/60/85Hz 1280×1024@48/50/60/75/85Hz 1360×768@60Hz 1364×1024@48/50/85Hz		1600×1200@48/50/60Hz 1680×1050@60Hz 1792×1280@60Hz 1920×1080@30/48/50/60Hz 1920×1200@50/60Hz	
• DP 1.1 • HDMI 1.4	800×600@50/60/75/85Hz 1024×768@48/50/60/75/85Hz 1152×864@75Hz 1280×720@48/50/60Hz 1280×768@48/50/60/75Hz 1280×800@50/60Hz 1280×960@50/60/85Hz 1280×1024@48/50/60/75/85Hz 1360×768@60Hz 1364×1024@48/50/60/75Hz 1440×1050@48/50/60/75Hz 1440×900@60/75/85Hz 1600×900@48/50/60Hz		1680×1050@60Hz 1792×1280@60Hz 1920×1080@30/48/50/60Hz 1920×1200@50/60Hz 2048×1080@30/48/50/60Hz 2048×1152@30Hz 2304×1152@60Hz 2048×1152@60Hz 2560×1080@50/60Hz 2560×1400@50/60Hz 3840×1080@30/50/60Hz 3840×2160@30Hz	
3G-SDI	480i, 576i 1280×720p@24/25/30/50/60Hz 1920×1080p@24/25/30/50/60Hz			
Overall Specifications		T		
Electrical specifications	Power connector  Power consumption	AC100-240V~50/60Hz 50 W		
Operating environment	Operating temperature	−20°C to +70°C		
	Operating humidity	20% to 90%		
Physical specifications	Storage humidity 10% to 95%  Dimensions 482.6 mm × 3		9.5 mm × 94.7 mm	
, , , , , , , , , , , , , , , , , , , ,	Package dimensions		550 mm × 561 mm × 155 mm	
	Net weight	5.3 kg		

	Gross weight	15 kg	
Packing information Accessory		1x Power cord, 1x Ethernet cable, 2x DVI cables, 1x USB cable, 1x HDMI cable, 1x HDMI to DVI cable, 1x mini DP to DP cable, 1x User Manual	
	Flight case	550 mm × 561 mm × 155 mm	
Certifications		RCM, UL/CUL, IC, CB, RoHS, FCC, LVD, EMC	
Noise Level (typical at 25°C/77°F)		50 dB(A)	

### **Video Source Features**

Input Connector	Color Depth		Max. Input Resolution
DP 1.1	8 bit	RGB 4:4:4	3840×1080@60Hz
HDMI 1.4		YCbCr 4:4:4	O · '
		YcbCr 4:2:2	. 6
	10 bit	-	Unsupported
	12 bit	-	()\
HDMI 1.3	8 bit	RGB 4:4:4	1920×1080@60Hz
		YCbCr 4:4:4	1920×1080@60Hz
		YCbCr 4:2:2	
	10 bit	<b>D</b>	Unsupported
	12 bit	-	
DVI	8 bit	RGB 4:4:4	1920×1080@60Hz
3G-SDI	<ul> <li>Maximum input resolution: 1920×1080@60Hz</li> <li>Does not support input resolution and bit depth settings.</li> <li>Supports ST-424 (3G) and ST-292 (HD) input signals.</li> </ul>		

www.novastar.tech

#### **FCC Caution**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

www.novastar.tech

#### Copyright © 2020 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

#### **Trademark**

NOVA STAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

#### Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website www.novastar.tech

Technical support support@novastar.tech